


STEP 1

- STEP 1 COVER EXISTING MANHOLE WITH APPROVED MATERIAL AND CONSTRUCT OVERLAY ACROSS TOP OF MANHOLE.
- STEP 2 SAW CUT EXCAVATION AREA AROUND MANHOLE 12" MINIMUM FROM MANHOLE FRAME.
- STEP 3 RAISE MANHOLE FRAME RINGS TO FINISH PAVEMENT PROFILE AND CROSS SLOPE.
- STEP 4 BACKFILL WITH EARLY STRENGTH PORTLAND CEMENT CONCRETE (P.C.C.) TO DEPTHS AS DIRECTED.

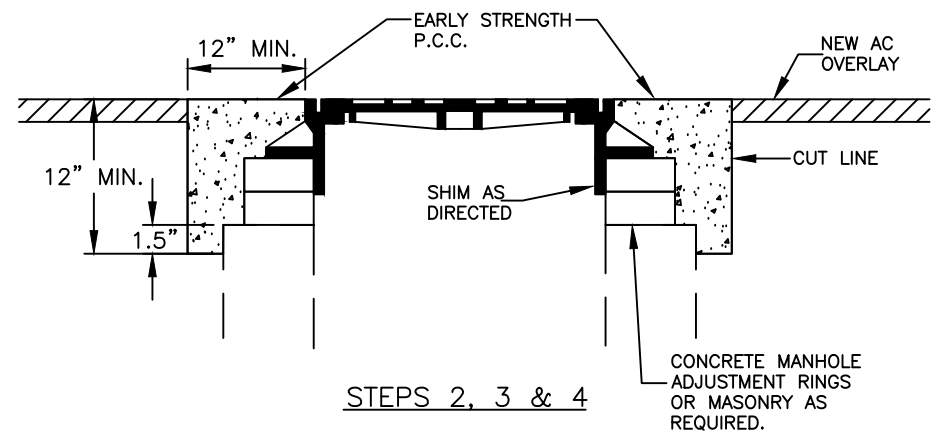

STEPS 2, 3 & 4

NOT TO SCALE



**MANHOLE ADJUSTMENT DETAIL**